



Addendum to Kettle Operating Instructions

Regarding AQMD Rule 1147

Per Manufacturer's recommendation, operator shall keep jet burner clean and free of carbon build-up, and inspect quarterly for any damage, build-up or defects.

BTU Chart: Refer to rating plate (serial tag) on kettle to find Jet & Burner

		ORIFICE SIZE					
		60	48	46	36	34	32
BTU/HR & LB/HR OF LPG	11" W.C.	11,200 0.5	40,600 1.9	46,100 2.2	79,800 3.7	86,700 4.1	94,600 4.4
	1 PSI	18,200 0.8	65,700 3.1	74,600 3.5	129,000 6.0	140,000 6.5	153,000 7.2
	2 PSI	25,900 1.2	93,100 4.4	105,600 4.9	182,500 8.5	198,200 9.37	216,400 10.1
	5 PSI	40,600 1.9	146,900 6.9	166,700 7.8	288,400 13.5	313,400 14.7	342,200 16
	10 PSI	57,800 2.7	209,200 9.8	237,300 11.1	410,700 19.2	446,300 20.9	487,300 22.8
	20 PSI	81,000 3.8	293,700 13.7	333,200 15.6	576,800 27.0	626,700 29.3	684,400 32.0
	25 PSI	89,000 4.2	324,900 15.2	368,700 17.2	638,900 29.9	694,300 32.5	758,200 35.5
	30 PSI	96,500 4.5	351,100 16.4	398,500 18.6	690,400 32.3	750,100 35.1	819,200 38.3
	35 PSI	102,500 4.8	375,000 17.5	425,000 19.9	736,500 33.4	802,500 37.2	867,500 40.5