



SUPER ANCHOR SAFETY®

Hinge2™ Fastener Specifications Addendum No. 2 09-2020

For: Ridge or Field installation over Type-B metal decking with top flanges perpendicular to the slope/parallel with the ridge.

Installation Instructions

Attach Hinge2 as shown over min. 22ga.type-B metal decking at the ridge or field with the D-ring centered between the top flanges as shown at Figs.1,2.

- Blazer™1.0" Hex Head Screws.
Attach Hinge2 with a min. of 9 Screws per/leg through top flanges.

Maximum Arrest Force (MAF)

Each person attached to the anchor must have a personal energy absorber component as part of their PPE with an MAF rating of no more than 1,800lb. [Fall Restraint Definition OSHA 1926.751](#)
"A means of fall protection that prevents the user from falling any distance." **NO free fall exposure!**

Consult Hinge2 2018 Instruction Manual prior to use.
Warning! Do not substitute SAS specified fasteners with other types.

Fig.1
Ridge Installation


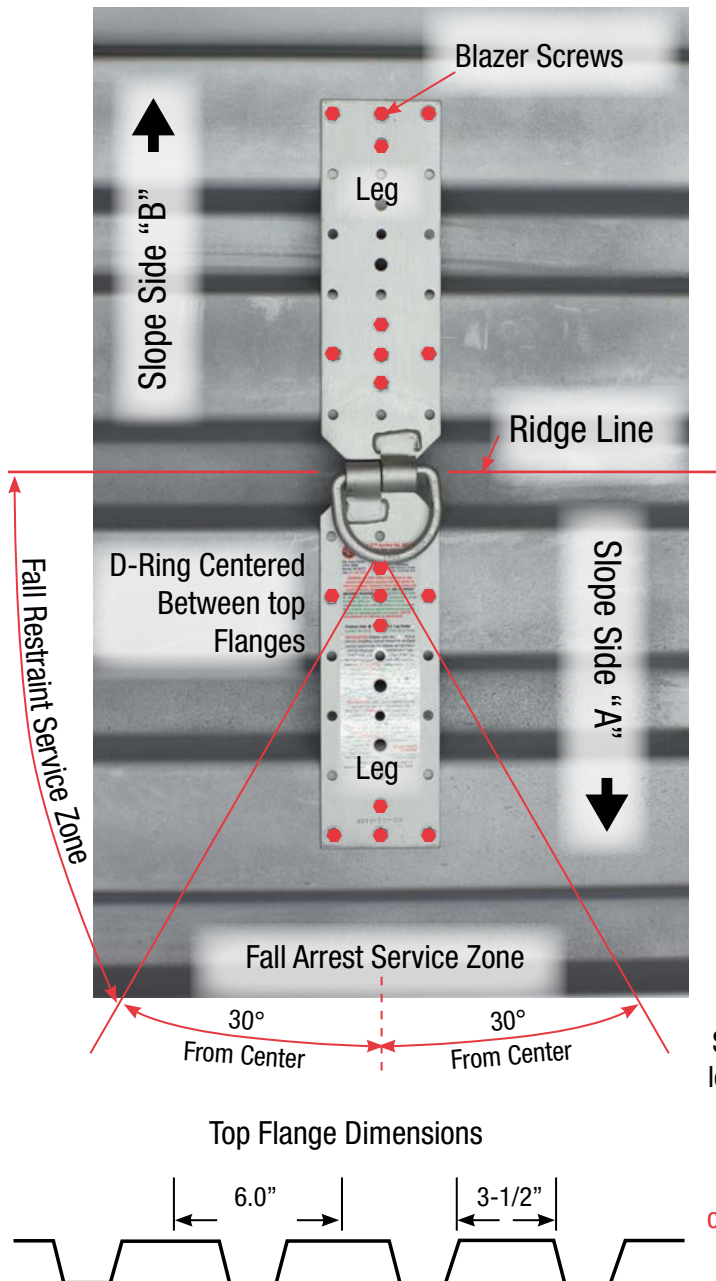


Fig.2
Field Installation
Ridge Line

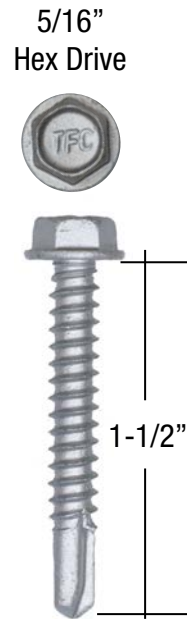

Blazer Metal Deck Screw
SAS No. 2033-1.5

Torque Specification
Set cordless drill at lowest torque range that allows installation.

WARNING! Do not over tighten screws.

